SmartCAM_{cnc}



1144 Gateway Loop, Ste. 220 Springfield OR 97477-7750 Tel: 541-344-4563 Fax: 541-683-4795 www.SmartCAMcnc.com

SmartCAM v13 System Requirements

Before installing SmartCAM®, verify that your computer meets the following minimum system hardware and operating system requirements. For optimum performance, your system should satisfy the recommended configuration. SmartCAM applications may function on systems that do not meet the minimum requirements, but these configurations are not supported.

Operating System

Required: Microsoft Windows XP® Professional or Windows 2000®*

SmartCAM applications *may* function properly on older Windows operating systems, such as Windows 95/98/ME, Windows NT 4.x, but SmartCAMcnc will not be able to support operating systems issues for customers running older operating systems.

SmartCAM and Microsoft Office XP

*Microsoft has published a support bulletin detailing a problem with the **Alternative User Input** feature in **Windows Office XP**. This feature *must* be disabled to run SmartCAM. To learn how to do this, please read the SmartCAM Tech Note 200 found at:

http://www.smartcamcnc.com/ts_tnote200.asp

System Hardware

Required: Network Interface Card (a.k.a., Ethernet or NIC card) or motherboard embedded with NIC, used with software licensing of SmartCAM. **IMPORTANT: the network card does NOT need to be attached to a network, only installed on the motherboard.** If the network card is not attached to a network, the card must first be properly configured.

Please read SmartCAM Tech Note 208 found at: http://www.smartcamcnc.com/ts tnote208.asp

Processor

Recommended: Pentium® 4
Minimum: Pentium® III or greater

Physical RAM

Recommended: 512 Mb or greater

Minimum: 128 Mb

Hard Disk Space

Minimum: 25MB for installation.

Note: data files created in SmartCAM require 0.5-5 Mb storage space.

Video Display

Recommended: 1280x1024 screen resolution or greater; 16-24 bit color

Minimum: 1024x768; 256 colors

Devices

Minimum: Windows Mouse

Note: Digitizers must be configured as a mouse.